
 


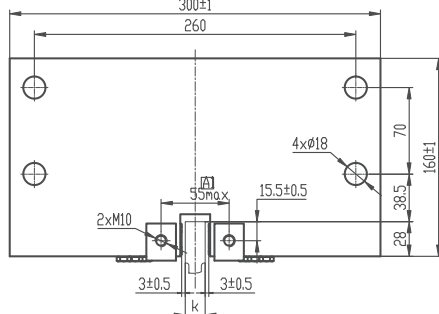



Technical drawing of the rear view of a component. The drawing shows a rectangular base with a central mounting area. Dimensions are indicated: a total width of 206±1, a distance of 90 between two vertical lines, and a distance of 63 between two horizontal lines. A dimension of 65 is shown for the bottom section. A label '4xM12' points to a mounting hole. The drawing is labeled '(228)' at the bottom.


- 1 本安全型埋管为GX-188, 适用于X型埋管, 埋管形式为双管双排, 埋管规格为M10;
- 2 本安全型埋管运行速度 $\leq 2.5\text{m/s}$, $1000\text{kg} \leq P < 4000\text{kg}$, $K=10/15.88/16$, 使用参数以实际形式试验数据为准;
- 3 埋管和连接管必须密封无漏气, 无卡阻;
- 4 表面喷涂防锈油颜色由甲方确认;
- 5 安装时, 需提前按要求安装可拆卸, 导轨前向和侧向与活动面保持同轴度等。


测量范围时, 需活动导轨长度:

- 6 安全型埋管不得自行制造, 需经国家资质生产厂家;
- 7 埋管规格可参照向扁钢GB/T 13616标准等, 埋管规格以实际为准;
- 8 埋管与导轨面 3 ± 0.5 度时, 埋管 $\square$ 尺寸, 埋管按设计需保证埋管按设计要求状态;
- 9 未过尺寸或高度公差参照GB/T 1804 - m, 未过规格公差参照公差参照GB/T 1194 - k。

5	X0A2682ADS005	3001~3200	≤2.5	15.88
4	X0A2682ADS004	3201~3400		
3	X0A2682ADS003	3401~3600		
2	X0A2682ADS002	3601~3800		
1	X0A2682ADS001	3801~4000		
序号	西奥件号	适应 (P+Q) 值 (kN)	电梯额定速度 V (m/s)	导轨宽 K mm

共 頁 第 1

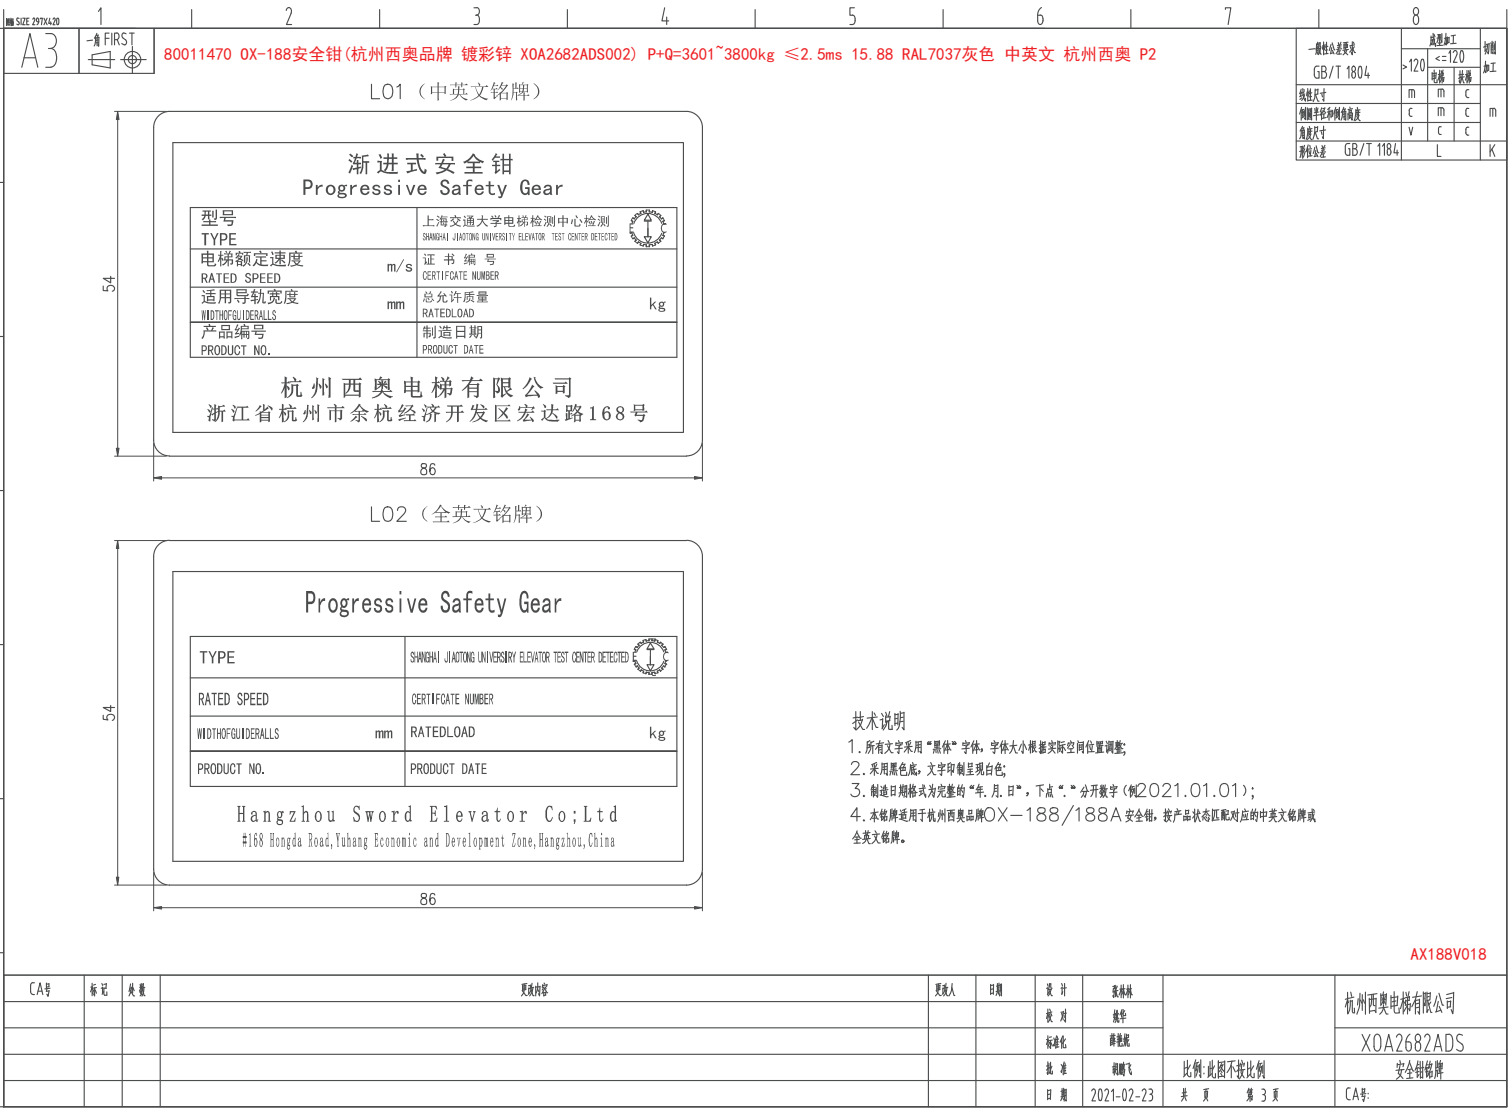

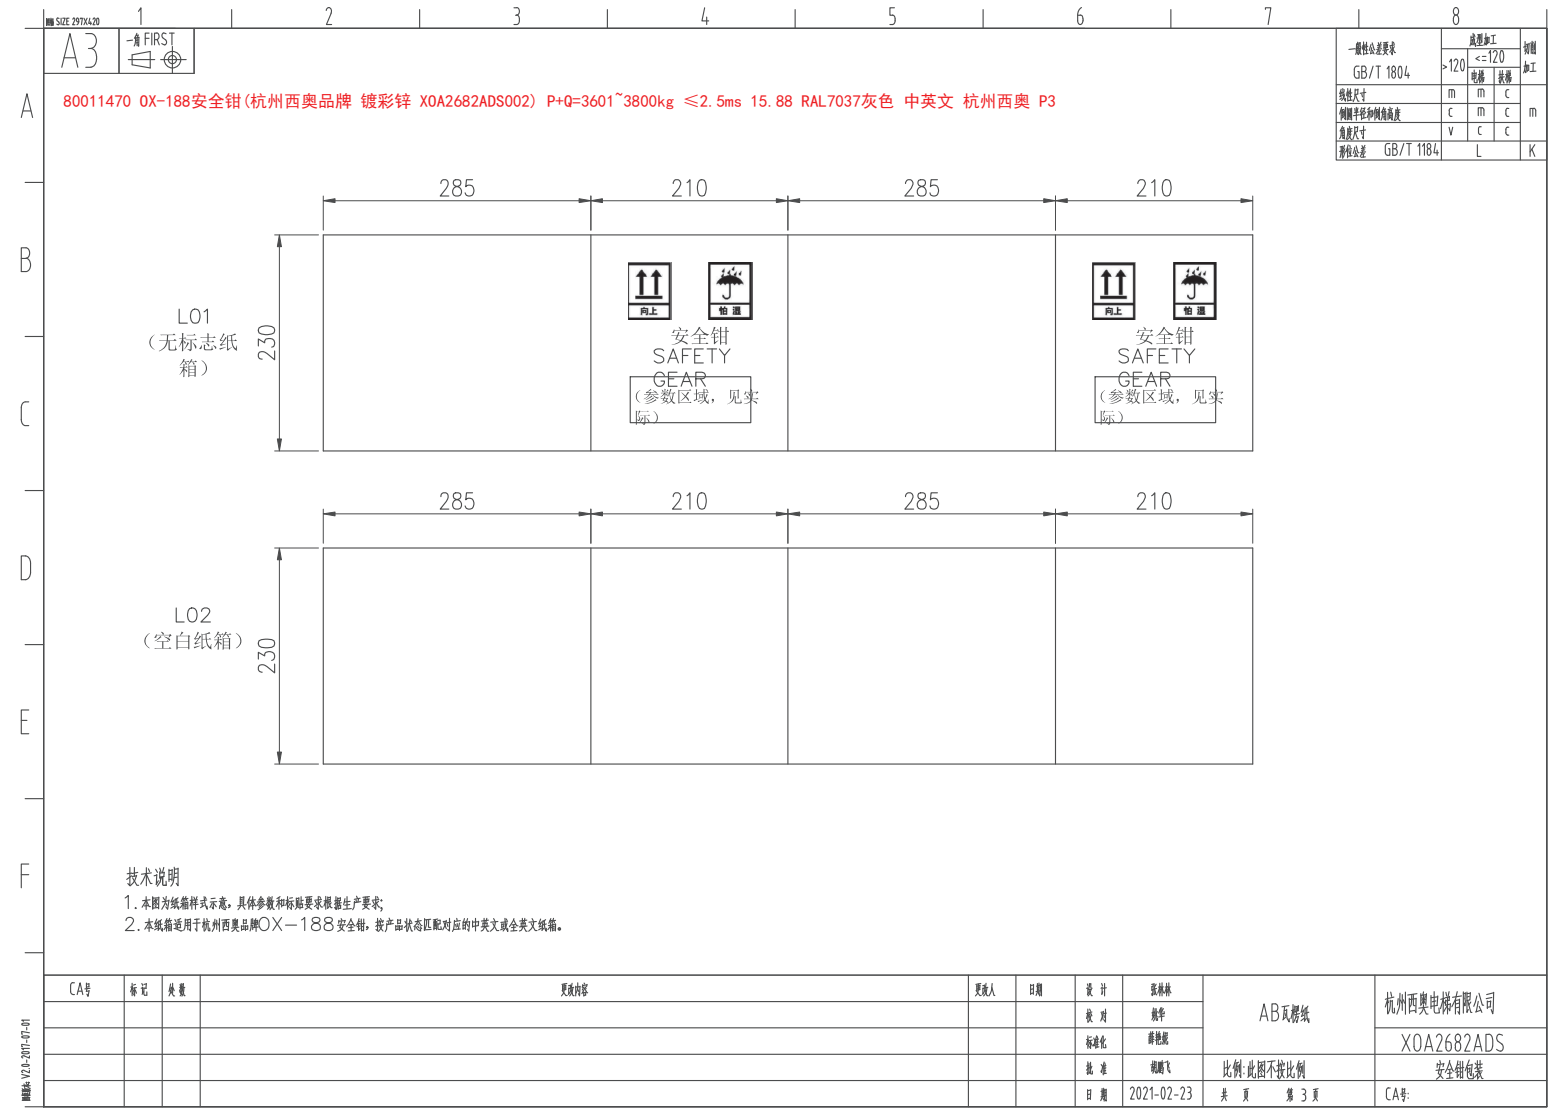

1		2		3		4		5		6		7		8																																																																																																																																															
A3		FIRST																																																																																																																																																											
80011470 OX-188安全钳 (杭州西奥品牌 镀锌锌 X0A2682ADS002) P+Q=3601~3800kg ≤2.5ms 15.88 RAL7037灰色 中英文 杭州西奥 P5														<table><tr><td>一般性公差要求</td><td colspan="2">GB/T 1804</td><td colspan="2">成型加工</td><td rowspan="2">倒圆</td></tr><tr><td></td><td colspan="2"></td><td colspan="2">>120 <=120</td></tr><tr><td>线性尺寸</td><td>m</td><td>m</td><td>c</td><td>c</td><td>m</td></tr><tr><td>倒圆半径和倒圆高度</td><td>c</td><td>m</td><td>c</td><td>c</td><td>m</td></tr><tr><td>角度尺寸</td><td>v</td><td>c</td><td>c</td><td>c</td><td></td></tr><tr><td>形位公差</td><td colspan="2">GB/T 1184</td><td>L</td><td>K</td><td>K</td></tr></table>		一般性公差要求	GB/T 1804		成型加工		倒圆				>120 <=120		线性尺寸	m	m	c	c	m	倒圆半径和倒圆高度	c	m	c	c	m	角度尺寸	v	c	c	c		形位公差	GB/T 1184		L	K	K																																																																																																											
一般性公差要求	GB/T 1804		成型加工		倒圆																																																																																																																																																								
			>120 <=120																																																																																																																																																										
线性尺寸	m	m	c	c	m																																																																																																																																																								
倒圆半径和倒圆高度	c	m	c	c	m																																																																																																																																																								
角度尺寸	v	c	c	c																																																																																																																																																									
形位公差	GB/T 1184		L	K	K																																																																																																																																																								
<table><tr><td colspan="2">260</td><td colspan="2">260</td></tr><tr><td colspan="2">190</td><td colspan="2">190</td></tr><tr><td colspan="2">OX-188系列渐进式安全钳 (OX-188/OX-188A/OX-188B) 安装使用说明书</td><td colspan="2"><table><tr><td colspan="2">V. Test & Maintenance</td><td colspan="2">OX-188/OX-188A/OX-188B</td></tr><tr><td colspan="2">1. After the complete installation of the elevator, the test of the safety gear is carried out according to the relevant regulations of GB7588 and the "Inspection & test before the commissioning" of GB10060.</td><td colspan="2">I. General</td></tr><tr><td colspan="2">2. Periodic inspection and test of the safety gear and the inspection and test after the breakdown of the elevator should comply with the requirements in the safety regulation of elevator manufacture and installation.</td><td colspan="2">1. Applications & Features: Safety gear is an important safety element of elevator, and its main application is controlled by the speed governor to stop the car and its load on the guide rail to avoid the occurrence of accidents, when the elevator car over-speeds in down direction under the situation of breakdown and its speed reaches the governor tripping speed. Our progressive safety gear mainly adopts to the elevators in middle or low floors whose rated speed is≤2.5m/s.</td></tr><tr><td colspan="2">(1) Inspection of function: Every year check once at least whether its function is under good condition.</td><td colspan="2">2. Operating conditions of the safety gear</td></tr><tr><td colspan="2">(2) It is necessary to check and adjust the safety gear completely after its every operation</td><td colspan="2">(1) The quality of material, the rigidity and the thickness of all the guide rails should comply with the requirements of the elevator guide rail standard.</td></tr><tr><td colspan="2">(3) Every year check the rail gap twice at least. After brake, it's necessary to check rail gap.</td><td colspan="2">(2) Keep the elevator well clean and no dust, and no oily soil and dust on the stop wedge of the guide rail and safety gear.</td></tr><tr><td colspan="2">(4) Movable wedge shall be replaced due to excessive abrasion.</td><td colspan="2">(3) Among the waifion, no gearless conduction dust which is with explosive danger or sufficient to erode the metal.</td></tr><tr><td colspan="2">VI. Attached figure</td><td colspan="2">II. Brief instruction of the structure</td></tr><tr><td colspan="2"></td><td colspan="2">Type progressive safety gear consists of the elements of safety block, U-shaped spring, fixed wedge, rolling pillar files etc..</td></tr><tr><td colspan="2">-1-</td><td colspan="2">-1-</td></tr></table></td></tr><tr><td colspan="16"><table><tr><td colspan="2">技术要求</td><td colspan="2">杭州西奥电梯有限公司</td></tr><tr><td colspan="2">1、本图为说明书附图，其具体内容参见实物说明书。</td><td colspan="2">X0A2682ADS</td></tr><tr><td colspan="2">2、本说明书适用于杭州西奥品牌中文标注OX-188/188A系列渐进式安全钳。</td><td colspan="2">安全钳说明书</td></tr><tr><td colspan="2"></td><td colspan="2">CA号:</td></tr></table></td></tr><tr><td colspan="16"><table><tr><td>CA号</td><td>标记</td><td>数量</td><td>更改内容</td><td>更改人</td><td>日期</td><td>设计</td><td>张林林</td><td rowspan="4">比例:此图不按比例 共 5 页</td><td rowspan="5">CA号:</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>校对</td><td>魏华</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>标准化</td><td>薛艳妮</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>批准</td><td>胡鹏飞</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>日期</td><td>2021-02-23</td></tr></table></td></tr></table>																260		260		190		190		OX-188系列渐进式安全钳 (OX-188/OX-188A/OX-188B) 安装使用说明书		<table><tr><td colspan="2">V. Test & Maintenance</td><td colspan="2">OX-188/OX-188A/OX-188B</td></tr><tr><td colspan="2">1. After the complete installation of the elevator, the test of the safety gear is carried out according to the relevant regulations of GB7588 and the "Inspection & test before the commissioning" of GB10060.</td><td colspan="2">I. General</td></tr><tr><td colspan="2">2. Periodic inspection and test of the safety gear and the inspection and test after the breakdown of the elevator should comply with the requirements in the safety regulation of elevator manufacture and installation.</td><td colspan="2">1. Applications & Features: Safety gear is an important safety element of elevator, and its main application is controlled by the speed governor to stop the car and its load on the guide rail to avoid the occurrence of accidents, when the elevator car over-speeds in down direction under the situation of breakdown and its speed reaches the governor tripping speed. Our progressive safety gear mainly adopts to the elevators in middle or low floors whose rated speed is≤2.5m/s.</td></tr><tr><td colspan="2">(1) Inspection of function: Every year check once at least whether its function is under good condition.</td><td colspan="2">2. Operating conditions of the safety gear</td></tr><tr><td colspan="2">(2) It is necessary to check and adjust the safety gear completely after its every operation</td><td colspan="2">(1) The quality of material, the rigidity and the thickness of all the guide rails should comply with the requirements of the elevator guide rail standard.</td></tr><tr><td colspan="2">(3) Every year check the rail gap twice at least. After brake, it's necessary to check rail gap.</td><td colspan="2">(2) Keep the elevator well clean and no dust, and no oily soil and dust on the stop wedge of the guide rail and safety gear.</td></tr><tr><td colspan="2">(4) Movable wedge shall be replaced due to excessive abrasion.</td><td colspan="2">(3) Among the waifion, no gearless conduction dust which is with explosive danger or sufficient to erode the metal.</td></tr><tr><td colspan="2">VI. Attached figure</td><td colspan="2">II. Brief instruction of the structure</td></tr><tr><td colspan="2"></td><td colspan="2">Type progressive safety gear consists of the elements of safety block, U-shaped spring, fixed wedge, rolling pillar files etc..</td></tr><tr><td colspan="2">-1-</td><td colspan="2">-1-</td></tr></table>		V. Test & Maintenance		OX-188/OX-188A/OX-188B		1. After the complete installation of the elevator, the test of the safety gear is carried out according to the relevant regulations of GB7588 and the "Inspection & test before the commissioning" of GB10060.		I. General		2. Periodic inspection and test of the safety gear and the inspection and test after the breakdown of the elevator should comply with the requirements in the safety regulation of elevator manufacture and installation.		1. Applications & Features: Safety gear is an important safety element of elevator, and its main application is controlled by the speed governor to stop the car and its load on the guide rail to avoid the occurrence of accidents, when the elevator car over-speeds in down direction under the situation of breakdown and its speed reaches the governor tripping speed. Our progressive safety gear mainly adopts to the elevators in middle or low floors whose rated speed is≤2.5m/s.		(1) Inspection of function: Every year check once at least whether its function is under good condition.		2. Operating conditions of the safety gear		(2) It is necessary to check and adjust the safety gear completely after its every operation		(1) The quality of material, the rigidity and the thickness of all the guide rails should comply with the requirements of the elevator guide rail standard.		(3) Every year check the rail gap twice at least. After brake, it's necessary to check rail gap.		(2) Keep the elevator well clean and no dust, and no oily soil and dust on the stop wedge of the guide rail and safety gear.		(4) Movable wedge shall be replaced due to excessive abrasion.		(3) Among the waifion, no gearless conduction dust which is with explosive danger or sufficient to erode the metal.		VI. Attached figure		II. Brief instruction of the structure				Type progressive safety gear consists of the elements of safety block, U-shaped spring, fixed wedge, rolling pillar files etc..		-1-		-1-		<table><tr><td colspan="2">技术要求</td><td colspan="2">杭州西奥电梯有限公司</td></tr><tr><td colspan="2">1、本图为说明书附图，其具体内容参见实物说明书。</td><td colspan="2">X0A2682ADS</td></tr><tr><td colspan="2">2、本说明书适用于杭州西奥品牌中文标注OX-188/188A系列渐进式安全钳。</td><td colspan="2">安全钳说明书</td></tr><tr><td colspan="2"></td><td colspan="2">CA号:</td></tr></table>																技术要求		杭州西奥电梯有限公司		1、本图为说明书附图，其具体内容参见实物说明书。		X0A2682ADS		2、本说明书适用于杭州西奥品牌中文标注OX-188/188A系列渐进式安全钳。		安全钳说明书				CA号:		<table><tr><td>CA号</td><td>标记</td><td>数量</td><td>更改内容</td><td>更改人</td><td>日期</td><td>设计</td><td>张林林</td><td rowspan="4">比例:此图不按比例 共 5 页</td><td rowspan="5">CA号:</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>校对</td><td>魏华</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>标准化</td><td>薛艳妮</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>批准</td><td>胡鹏飞</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>日期</td><td>2021-02-23</td></tr></table>																CA号	标记	数量	更改内容	更改人	日期	设计	张林林	比例:此图不按比例 共 5 页	CA号:							校对	魏华							标准化	薛艳妮							批准	胡鹏飞							日期	2021-02-23
260		260																																																																																																																																																											
190		190																																																																																																																																																											
OX-188系列渐进式安全钳 (OX-188/OX-188A/OX-188B) 安装使用说明书		<table><tr><td colspan="2">V. Test & Maintenance</td><td colspan="2">OX-188/OX-188A/OX-188B</td></tr><tr><td colspan="2">1. After the complete installation of the elevator, the test of the safety gear is carried out according to the relevant regulations of GB7588 and the "Inspection & test before the commissioning" of GB10060.</td><td colspan="2">I. General</td></tr><tr><td colspan="2">2. Periodic inspection and test of the safety gear and the inspection and test after the breakdown of the elevator should comply with the requirements in the safety regulation of elevator manufacture and installation.</td><td colspan="2">1. Applications & Features: Safety gear is an important safety element of elevator, and its main application is controlled by the speed governor to stop the car and its load on the guide rail to avoid the occurrence of accidents, when the elevator car over-speeds in down direction under the situation of breakdown and its speed reaches the governor tripping speed. Our progressive safety gear mainly adopts to the elevators in middle or low floors whose rated speed is≤2.5m/s.</td></tr><tr><td colspan="2">(1) Inspection of function: Every year check once at least whether its function is under good condition.</td><td colspan="2">2. Operating conditions of the safety gear</td></tr><tr><td colspan="2">(2) It is necessary to check and adjust the safety gear completely after its every operation</td><td colspan="2">(1) The quality of material, the rigidity and the thickness of all the guide rails should comply with the requirements of the elevator guide rail standard.</td></tr><tr><td colspan="2">(3) Every year check the rail gap twice at least. After brake, it's necessary to check rail gap.</td><td colspan="2">(2) Keep the elevator well clean and no dust, and no oily soil and dust on the stop wedge of the guide rail and safety gear.</td></tr><tr><td colspan="2">(4) Movable wedge shall be replaced due to excessive abrasion.</td><td colspan="2">(3) Among the waifion, no gearless conduction dust which is with explosive danger or sufficient to erode the metal.</td></tr><tr><td colspan="2">VI. Attached figure</td><td colspan="2">II. Brief instruction of the structure</td></tr><tr><td colspan="2"></td><td colspan="2">Type progressive safety gear consists of the elements of safety block, U-shaped spring, fixed wedge, rolling pillar files etc..</td></tr><tr><td colspan="2">-1-</td><td colspan="2">-1-</td></tr></table>		V. Test & Maintenance		OX-188/OX-188A/OX-188B		1. After the complete installation of the elevator, the test of the safety gear is carried out according to the relevant regulations of GB7588 and the "Inspection & test before the commissioning" of GB10060.		I. General		2. Periodic inspection and test of the safety gear and the inspection and test after the breakdown of the elevator should comply with the requirements in the safety regulation of elevator manufacture and installation.		1. Applications & Features: Safety gear is an important safety element of elevator, and its main application is controlled by the speed governor to stop the car and its load on the guide rail to avoid the occurrence of accidents, when the elevator car over-speeds in down direction under the situation of breakdown and its speed reaches the governor tripping speed. Our progressive safety gear mainly adopts to the elevators in middle or low floors whose rated speed is≤2.5m/s.		(1) Inspection of function: Every year check once at least whether its function is under good condition.		2. Operating conditions of the safety gear		(2) It is necessary to check and adjust the safety gear completely after its every operation		(1) The quality of material, the rigidity and the thickness of all the guide rails should comply with the requirements of the elevator guide rail standard.		(3) Every year check the rail gap twice at least. After brake, it's necessary to check rail gap.		(2) Keep the elevator well clean and no dust, and no oily soil and dust on the stop wedge of the guide rail and safety gear.		(4) Movable wedge shall be replaced due to excessive abrasion.		(3) Among the waifion, no gearless conduction dust which is with explosive danger or sufficient to erode the metal.		VI. Attached figure		II. Brief instruction of the structure				Type progressive safety gear consists of the elements of safety block, U-shaped spring, fixed wedge, rolling pillar files etc..		-1-		-1-																																																																																																																			
V. Test & Maintenance		OX-188/OX-188A/OX-188B																																																																																																																																																											
1. After the complete installation of the elevator, the test of the safety gear is carried out according to the relevant regulations of GB7588 and the "Inspection & test before the commissioning" of GB10060.		I. General																																																																																																																																																											
2. Periodic inspection and test of the safety gear and the inspection and test after the breakdown of the elevator should comply with the requirements in the safety regulation of elevator manufacture and installation.		1. Applications & Features: Safety gear is an important safety element of elevator, and its main application is controlled by the speed governor to stop the car and its load on the guide rail to avoid the occurrence of accidents, when the elevator car over-speeds in down direction under the situation of breakdown and its speed reaches the governor tripping speed. Our progressive safety gear mainly adopts to the elevators in middle or low floors whose rated speed is≤2.5m/s.																																																																																																																																																											
(1) Inspection of function: Every year check once at least whether its function is under good condition.		2. Operating conditions of the safety gear																																																																																																																																																											
(2) It is necessary to check and adjust the safety gear completely after its every operation		(1) The quality of material, the rigidity and the thickness of all the guide rails should comply with the requirements of the elevator guide rail standard.																																																																																																																																																											
(3) Every year check the rail gap twice at least. After brake, it's necessary to check rail gap.		(2) Keep the elevator well clean and no dust, and no oily soil and dust on the stop wedge of the guide rail and safety gear.																																																																																																																																																											
(4) Movable wedge shall be replaced due to excessive abrasion.		(3) Among the waifion, no gearless conduction dust which is with explosive danger or sufficient to erode the metal.																																																																																																																																																											
VI. Attached figure		II. Brief instruction of the structure																																																																																																																																																											
		Type progressive safety gear consists of the elements of safety block, U-shaped spring, fixed wedge, rolling pillar files etc..																																																																																																																																																											
-1-		-1-																																																																																																																																																											
<table><tr><td colspan="2">技术要求</td><td colspan="2">杭州西奥电梯有限公司</td></tr><tr><td colspan="2">1、本图为说明书附图，其具体内容参见实物说明书。</td><td colspan="2">X0A2682ADS</td></tr><tr><td colspan="2">2、本说明书适用于杭州西奥品牌中文标注OX-188/188A系列渐进式安全钳。</td><td colspan="2">安全钳说明书</td></tr><tr><td colspan="2"></td><td colspan="2">CA号:</td></tr></table>																技术要求		杭州西奥电梯有限公司		1、本图为说明书附图，其具体内容参见实物说明书。		X0A2682ADS		2、本说明书适用于杭州西奥品牌中文标注OX-188/188A系列渐进式安全钳。		安全钳说明书				CA号:																																																																																																																															
技术要求		杭州西奥电梯有限公司																																																																																																																																																											
1、本图为说明书附图，其具体内容参见实物说明书。		X0A2682ADS																																																																																																																																																											
2、本说明书适用于杭州西奥品牌中文标注OX-188/188A系列渐进式安全钳。		安全钳说明书																																																																																																																																																											
		CA号:																																																																																																																																																											
<table><tr><td>CA号</td><td>标记</td><td>数量</td><td>更改内容</td><td>更改人</td><td>日期</td><td>设计</td><td>张林林</td><td rowspan="4">比例:此图不按比例 共 5 页</td><td rowspan="5">CA号:</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>校对</td><td>魏华</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>标准化</td><td>薛艳妮</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>批准</td><td>胡鹏飞</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td>日期</td><td>2021-02-23</td></tr></table>																CA号	标记	数量	更改内容	更改人	日期	设计	张林林	比例:此图不按比例 共 5 页	CA号:							校对	魏华							标准化	薛艳妮							批准	胡鹏飞							日期	2021-02-23																																																																																																				
CA号	标记	数量	更改内容	更改人	日期	设计	张林林	比例:此图不按比例 共 5 页	CA号:																																																																																																																																																				
						校对	魏华																																																																																																																																																						
						标准化	薛艳妮																																																																																																																																																						
						批准	胡鹏飞																																																																																																																																																						
						日期	2021-02-23																																																																																																																																																						