


OX-200 安装说明


OX-200 Installation Instructions

1. 拆下螺母, 弹簧垫圈, 平垫圈; Remove the nut, spring washer, flat washer ;

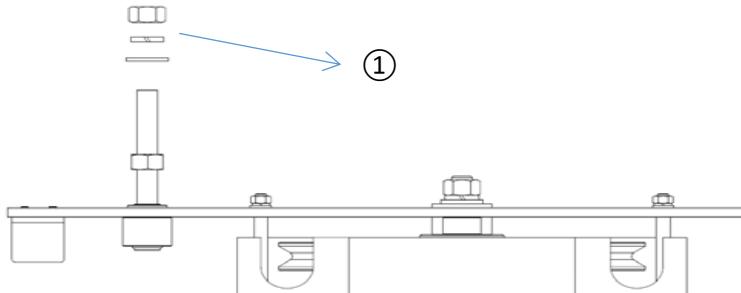

2. 按下图安装“安装板组件”，并将拆下的螺母，弹簧垫圈，平垫圈拧上；

Install the "mounting plate assembly" and screw the removed nut, spring washer, and flat washer ;

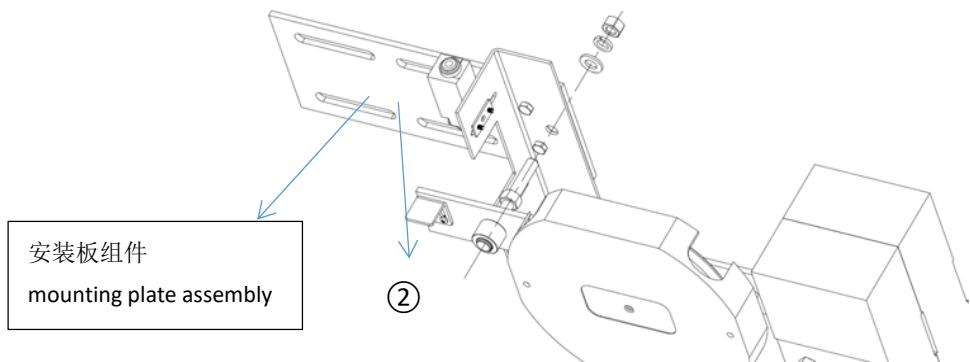

3. 当 $20 \leq B \leq 45$ (mm) 时, 绳轮位于 W 侧 (如下图) ;

When $20 \leq B \leq 45$ (mm) , rope wheel in the W side (as shown below)


4. 当 $50 \leq B \leq 80$ (mm) 时, 绳轮位于 M 侧;

When $50 \leq B \leq 80$ (mm) , rope wheel in the M side;

5. 通过调节螺母位置调节 B 参数至要求数值, 然后锁紧螺母;

By adjusting the position of the nut, the B parameter is required to reach the required value, and then lock the nut;

通过调节螺母位置, 确定 B 参数
Determine the B parameter by adjusting the position of the nut.

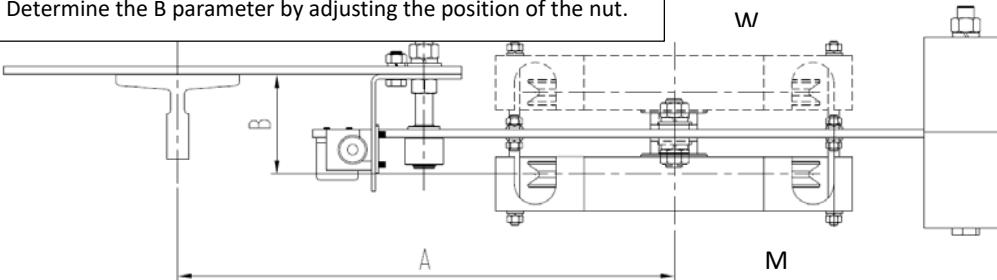

6. 将“安装板组件”贴紧导轨背面 (如上图) , 并用导轨夹使其固定在导轨上, 要求穿过钢丝绳后, 使涨紧装置尽量保持水平, 配重块的底面距离地面 ≥ 300 mm;

Attach the "mounting plate component" to the back of the guide rail (as above) and fix it on the guide rail with two guide clamps. After the wire rope is installed, the tightening device is at the level of the horizontal line as far as possible . The bottom surface of the weight block is more than 300mm.

